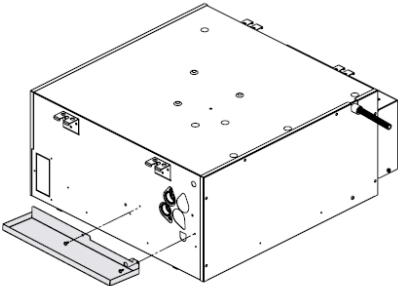
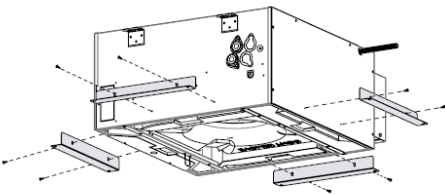


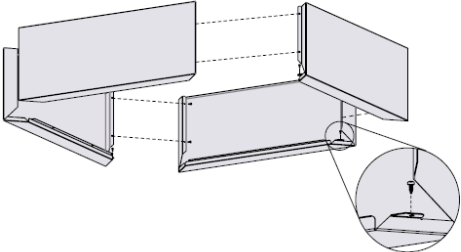
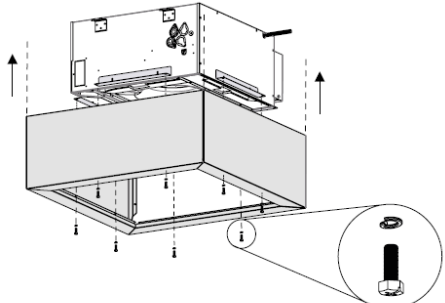





Montageanleitung Unterdeckenrahmen für KaCool D BG 1-4, Art. Nr.: 325009010110

<p>1</p> 	<p>2</p> 
 <p>nr. 2 x (4,2x9,5)</p>	 <p>nr. 8 x (4,2x9,5)</p>

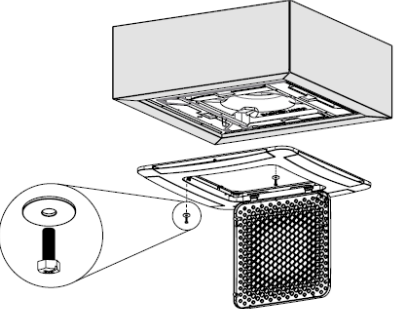
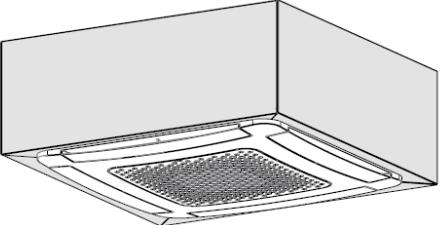


1. Montage Kondensatwanne

2. Montage, Haltewinkel Umhausung an  
Kassette

<p>3</p> 	<p>4</p> 
 <p>nr. 12 x (4,2x9,5)</p>	 <p>nr. 8 x (M5x14)</p>  <p>nr. 8 x (Grower M5x9)</p>

3. Alle Ecken verschrauben

4. Umhausung an Haltewinkel schrauben

<p>5</p> 	<p>6</p> 
 <p>nr. 4 x (M5x14)</p>  <p>nr. 4 x (M5x18)</p>	

5. Blende montieren